

EN INSTRUCTIONS FOR USE THE NEW TALKING FARM

Age: 1 - 4 years

PLEASE READ THESE INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE.

Requires 3 x 1.5V AA batteries (supplied). The batteries included in the toy at the time of purchase are supplied only for demonstration purposes at the point of sale and must be replaced with new batteries immediately after purchase.

WARNINGS:

For the child's safety.  **WARNING!**

- Before using the product, remove and dispose of plastic bags and all other packaging and keep out of reach of children. Choking hazard.
- Regularly inspect the product for signs of wear and damage. If any part of the toy is damaged, do not use and keep out of the reach of children.
- Use the toy under the continuous supervision of an adult.
- Do not use this toy in any way not illustrated in the manual.

HOW TO USE THE TOY

To activate the toy, simply move the pointer (A) from 0 to the desired language.

To start playing, press the button with the talking teddy bear (B). Each time this button is pressed, it activates a different level mode, introduced by a cute phrase from the teddy bear (there are 3 game levels in total).

The 3 game modes are as follows:

Option 1: press the button with the animals and numbers to learn to recognise these (for example: when the horse button is pressed, the voice says "the brown horse");

Option 2: listen to the animal noise and press the matching animal button;

Option 3: listen to the question and press the button with the right answer (for example: "Find the number 10!").

In modes 2 and 3, every correct answer is followed by congratulations, and a new question to be answered. Wrong answers are identified with a sweet expression, after which the question is repeated. If the wrong button is pressed several times, the child is asked to answer a different question.

After a few minutes of inactivity, the toy encourages the child to press a button. After repeating this invitation a few times, if no button is pressed, the toy automatically goes into standby mode. To reactivate the toy, simply press one of the buttons and select the desired play mode.

By pulling the sun-shaped lever downwards (C), the child can listen to a series of entertaining songs, each of which is dedicated to one of the animals that appears on the windmill wheel. The coloured lights on the wheel turn on and off in a clockwise direction, following the rhythm of the music. When the tune is finished, the light stops on one of the animals, revealing an interesting fact.

To make the batteries last longer, we recommend always switching off the toy after use, by moving the pointer back to position 0.

REMOVING AND INSERTING REPLACEABLE BATTERIES

- Batteries must only be replaced by an adult.
- To replace the batteries: loosen the screw on the cover with a screwdriver and open the cover. Remove the flat batteries and insert new ones, ensuring that the poles are in the right direction (as shown on the product). Finally, close the battery cover and tighten the screw fully.
- Always keep batteries and tools out of reach of children.
- Always remove flat batteries from the product to prevent any possible liquid leaks from damaging it.
- If the batteries are leaking liquid, replace them immediately, making sure to clean the battery compartment; thoroughly wash your hands if they have come into contact with the liquid.
- Always remove the batteries if the product will not be used for a long period of time.
- Only use alkaline batteries of the same type or equivalent to the type recommended for a correct product functioning.
- Never mix alkaline, standard (zinc-carbon) or rechargeable (nickel-cadmium) batteries.
- Do not mix old batteries with new batteries.
- Do not throw dead batteries into a fire or leave them in the environment; they must be disposed of through waste sorting.
- Do not short-circuit the power terminals.
- Do not attempt to recharge non-rechargeable batteries: they might explode.
- The use of rechargeable batteries is not recommended as the product may not work properly.
- When using rechargeable batteries, remove them from the product before recharging and recharge only under the supervision of an adult.
- Remove the batteries from the toy before disposing of the product.
- This product is not designed to be used with replaceable lithium batteries. **WARNING!** Improper use may create hazardous conditions.

THIS PRODUCT COMPLIES WITH THE DIRECTIVE 2012/19/EU.

The crossed-out bin symbol on the device indicates that at the end of its useful life, the product must be disposed of separately from household waste, by taking it to a separate collection point for electrical and electronic equipment or by giving it back to the retailer when purchasing a new equivalent device.


The user is responsible for taking the appliance to a special waste disposal site at the end of its life. If the unwanted appliance is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically; this avoids a negative impact on both the environment and health, and contributes towards the recycling of the product's materials. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.



1-4
y



The New Talking Farm

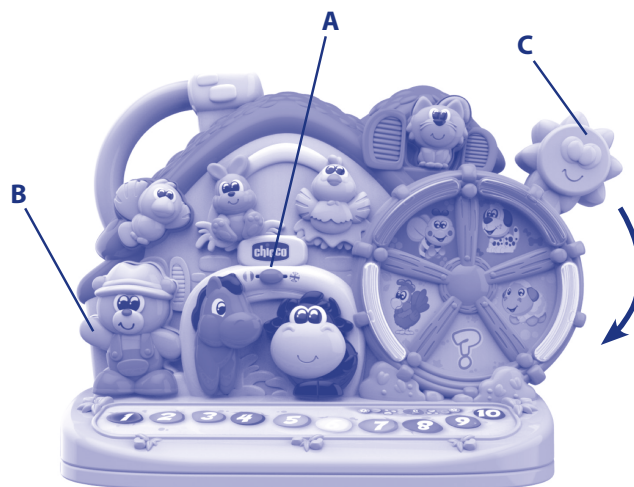

SONGS:

Farm song

This is the farm song,
Where animals are happy and get along,
There's horse, cow, and little bunny,
Don't forget cat who's furry and funny!

Farm Animals

The red rooster is up with the sun,
Wake up dog, let's go have some fun!
The bee loves to find a flower,
To make sweet honey every hour!
The little white sheep loves leaping,
To reach the bell to give it a ring!



Artsana S.p.A. - Via Saldarini Catelli, 1 - Grandate (CO) - Italy
www.chicco.com

46 009604 000 740_2150



THIS PRODUCT COMPLIES WITH EU DIRECTIVE 2006/66/EC

The crossed-out bin symbol on the batteries or on the product packaging indicates that at the end of their useful life, these items must be disposed of separately from household waste. They must not be disposed of as urban waste but must be taken to a separate waste collection point or returned to the retailer when purchasing new and equivalent rechargeable and non-rechargeable batteries. The chemical symbols Hg, Cd, Pb, printed under the crossed-out wheeled bin symbol, indicate the type of substance contained in the batteries: Hg=Mercury, Cd=Cadmium, Pb=Lead. The user is responsible for bringing batteries to the appropriate collection facilities at the end of their life, in order to facilitate treatment and recycling. If the flat batteries are collected correctly as separate waste, these can be recycled, handled and disposed of in an environmentally-friendly manner, thus helping to prevent negative effects on both the environment and on human health, as well as enabling the recycling of the materials from which the batteries are made. Illegal disposal of the product by the user will damage the environment and human health. For further information regarding the waste disposal services available, contact your local waste disposal agency or the shop where you bought the appliance.

CARE & MAINTENANCE

- Clean the toy using a soft dry fabric or microfibre cloth to avoid damaging the electric circuit. Do not clean using detergents or solvents.
- Protect the product from heat, dust, sand and water.

WARRANTY

The product is guaranteed against any conformity defect in normal conditions of use as stated in the instructions. Therefore, the warranty does not apply in the case of damage caused by improper use, wear or accidental events. For the duration of warranty on conformity defects, please refer to the specific provisions of national laws applicable in the country of purchase, where provided.

IS NOTENDALEIÐBEININGAR TALANDI BÓNDABÆRINN

Aldur: 1 - 4 ára

VINSAMLEGAST LESTU ÞESSAR LEIÐBEININGAR FYRIR NOTKUN OG GEYMDU ÞÆR TIL FRAMTÍÐARNOTKUNAR

Krefst 3 x 1,5V AA rafhláðna (fylgja með). Rafhlöðurnar sem fylgja leikfanginu eru hugsáðar til að prufa leikfangið þegar það er keypt. Vinsamlegast skiptu um rafhlöður um leið og notkun á leikfanginu hefst.

VIÐVÖRUN:



VIÐVÖRUN!

- Áður en varan er notuð skal fjarlægja og farga öllum plastpokum og öðrum umbúðum og setja þar sem börn ná ekki til. Köfnunarhætta.
- Skoðaðu vöruna reglulega með tilliti til slits og skemmda. Ef einhver hluti leikfangsins er skemmdur skal hætta notkun þess og geyma það þar sem börn ná ekki til þess.
- Notaðu leikfangið undir stöðugu eftirliti fullorðinna.
- Leikfangið skal eingöngu nota samkvæmt leiðbeiningum.

HVERNIG Á AÐ NOTA LEIKFANGIÐ

Til að virkja leikfangið skaltu færa bendilinn (A) úr 0 yfir á viðkomandi tungumál. Til að hefja leikinn ýttu á takkann með talandi bangsanum (B). Í hvert skipti sem ýtt er á þennan takka virkjast mismunandi leiðir til að spila. Bangsinn segir barninu hvernig á að spila. (Það eru 3 leiðir til að spila í heildina).

Leiðirnar 3 til að spila eru eftirfarandi:

Valkostur 1: ýttu á takkann með dýrunum og tölunum til þess að læra að þekkja þau (til dæmis: þegar ýtt er á takkan með hestinum segir röddin „brúni hesturinn“);

Valkostur 2: hlustaðu á dýrahljóðið og ýttu á samsvarandi dýr;

Valkostur 3: hlustaðu á spurninguna og ýttu á takkann með rétta svarinu (til dæmis: „Finndu töluna 10!“).

Í stillingum 2 og 3 þegar svarað er rétt fær barnið hamingjuóskir og ný spurning verður spurð. Röngum svörum er svarað neitandi með ljúfri röddu og eftir það er spurningin endurtekin. Ef ýtt er nokkrum sinnum á rangan takka er barnið beðið um að svara annarri spurningu. Eftir nokkrar mínútur af aðgerðaleysi hvetur leikfangið barnið til að ýta á takka. Eftir að hafa endurtekið þetta boð nokkrum sinnum og ekki er ýtt á neinn takka fer leikfangið sjálfkrafa í biðstöðu. Til að virkja leikfangið á ný ýttu á einn af tökkunum og veldu leikinn sem þú vilt spila.

Með því að toga gulu stönginni niður á við (C) getur barnið hlustað á röð af skemmtilegum lögum, hvert og eitt er tileinkað einu af dýrunum sem birtist á vindmylluhjólinu. Litrík ljósín á hjólinu kvikna og slökkna í takt við tónlistina. Þegar laginu er lokið stoppar ljósið á einu dýranna og segir áhugaverða staðreynd. Til að rafhlöðurnar endist sem lengst mælum við með því að slökka alltaf á leikfanginu eftir notkun, með því að færa bendilinn aftur í stöðu 0.

FJARLÆGJA OG SKIPTA UM RAFHLÖÐUR

- Aðeins fullorðinn einstaklingur má skipta um rafhlöður.
- Til að skipta um rafhlöðurnar, losaðu skrúfuna á lokinu með skrufjárnri og opnaðu hólfíð. Fjarlægðu gömlu rafhlöðurnar og settu nýjar í og tryggðu að skautin snúi í rétta átt (eins og sýnt er á vörinni). Lokaðu hólfínu og hertu skrúfuna að fullu.
- Geymið rafhlöður og verkfæri alltaf þar sem börn ná ekki til.
- Fjarlægðu alltaf gamlar rafhlöður úr tækinu til að koma í veg fyrir að vökvi leki úr þeim og skemmi tækið.
- Ef rafhlöðurnar leka vökva skaltu skipta um þær tafarlaust og passa að þrifa hólfíð sem geymir rafhlöðuna vel. Ef hendurnar hafa komist í snertingu við vökvann skaltu þvo þær vandlega.

- Fjarlægðu alltaf rafhlöðurnar ef varan verður ekki notuð í langan tíma.
- Notaðu aðeins alkaline rafhlöður af sömu gerð eða samsvarandi þeirri gerð sem mælt er með.
- Ekki nota alkaline rafhlöður með carbon zink rafhlöðu eða endurhlaðanlegum rafhlöðum.
- Ekki nota gamlar rafhlöður með nýjum rafhlöðum.
- Ekki henda ónýtum rafhlöðum í eld og ekki skilja þær eftir á víðavangi, þeim verður að farga á endurvinnslustöð.
- Ekki má verða skammhlaup í rafhlöðupólunum.
- Ekki reyna að endurhlaða venjulegar óendurhlaðanlegar rafhlöður: þær gætu sprungið.
- Ekki er mælt með því að nota endurhlaðanlegar rafhlöður þar sem varan gæti ekki virkað rétt.
- Aðeins ætti að endurhlaða rafhlöður undir umsjón fullorðinna. Endurhlaðanlegar rafhlöður verður að fjarlægja úr leikfanginu áður en þær eru hlaðnar.
- Fjarlægðu rafhlöðurnar úr leikfanginu áður en vörinni er fargað.
- Þessi vara er ekki hönnuð til notkunar með skiptanlegum litium rafhlöðum. VIÐVÖRUN! Óviðeigandi notkun getur skapað hættulegar aðstæður.



ÞESSI VARA UPPFYLIR STAÐLA SAMKVÆMT TILSKIPUN 2012/19/ESB.

Táknið með mynd af ruslatunnu með krossi yfir þýðir að ekki má farga vörinni með venjulegu heimilissorpi. Vörinni þarf að skila í endurvinnslu eins og lög gera ráð fyrir á hverjum stað fyrir sig. Með því að henda slíkum vörum ekki með venjulegu heimilissorpi hjálpar þú til við að draga úr því magni af úrgangi sem þarf að brenna eða nota sem landfyllingu og lágmarkar möguleg neikvæð áhrif á heilsu fólks og umhverfið. Þú færð nánari upplýsingar í verslun Chicco.



ÞESSI VARA UPPFYLIR STAÐLA SAMKVÆMT TILSKIPUN ESB 2006/66/EC.

Táknið með mynd af ruslatunnu á rafhlöðunum eða á vöruumbúðum gefa til kynna að þeim megi ekki farga í heimilissorpi. Þeim þarf að skila í endurvinnslu eins og lög gera ráð fyrir á hverjum stað fyrir sig. Með því að henda slíkum vörum ekki með venjulegu heimilissorpi hjálpar þú til við að draga úr því magni af úrgangi sem þarf að brenna eða nota sem landfyllingu og lágmarkar möguleg neikvæð áhrif á heilsu fólks og umhverfið. Efnatáknin Hg, Cd eða Pb, þar sem þau eru merkt, gefa til kynna að rafhlaðan inniheldur meira en tilgreint gildi kvikasilfurs (Hg), kadmíums (Cd) eða blýs (Pb) sem sett er fram í reglugerð um rafhlöður og rafgeyma. Notandinn ber ábyrgð á því að koma rafhlöðum á viðeigandi endurvinnslustöð við lífslok þeirra. Ef ónýtum rafhlöðunum er safnað saman sem aðskilinn úrgangur er hægt að eyða og farga þeim og þar með lágmarka umhverfis- og heilsuspjöll af völdum rafhlaðna. Rafhlöður eru spilliefni og geta verið skaðlegar heilsu og umhverfi ef þeim er ekki skilað til úrvinnslu heldur beint í heimilissorpi. Þú færð nánari upplýsingar í verslun Chicco.

NOTKUNAR OG ÞRIFALEIÐBEININGAR

- Þrífðu leikfangið með þurrum klút eða örtrefjaklút. Ekki nota fljótandi hreinsiefni eða sterk efni.
- Verndaðu vöruna gegn hita, ryki, sandi og vatni.

ÁBYRGÐ

Varan er í ábyrgð gagnvart göllum sem samræmast ekki vörulýsingu að því tilskyldu að varan sé notuð í venjulegum aðstæðum eins og fram kemur í notendaleiðbeiningum. Ef varan er ekki notuð eins og ætlast er til og eða er notuð á rangan hátt, þá er ekki hægt að axla ábyrgð á tjóni sem af þessu hlýst. Fyrir gildistíma ábyrgðar er vísað til landslaga í hverju landi fyrir sig.